

Note!

Please note that there can be small differences between your product and the images in these instructions.

Note!

Please note that during storage and transport, especially at high ambient temperature, some of the oil and grease used for assembly may leak and stain the packaging. This will not cause damage to the product, wipe off the excessive oil or grease with a cloth.

Kit Contents		
Description	Part No	Pcs
Sticker	00192-01	2
C-spanner	00710-02	1
Preload adjustment tool	03199-01	1
Owners manual	07440-02	1

Note!

Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.

Warning!

Before you install this product, read the Öhlins Owner's manual. This product is an important part of the vehicle and the vehicle stability.

Shock absorber for Mitsubishi Lancer Evo 7-9

MIR 3P04/4P04

Mounting Instructions



MOUNTING INSTRUCTIONS

⚠ Warning!

We strongly recommend to let an Öhlins dealer install this product.

⚠ Warning!

If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.

👁 Note!

When you work with this product, see the vehicle service manual for vehicle specific procedures and important data.

👁 Note!

Before you install this product clean the vehicle.

1

Raise the car so that the front wheels are off the ground.

2

Remove the rear wheels.

3

Remove the lower and the upper attachments and remove the original shock absorbers.

👁 Note!


Compress the shock absorber when removing it.

👋 Caution!

Do not use an impact wrench when removing the top mount from the shock absorber. It may cause the piston nut to come loose from the piston shaft.

4

Remove the top mount and the rubber mountings from the original shock absorber. Install the top mount and the bushings to the Öhlins shock absorbers.

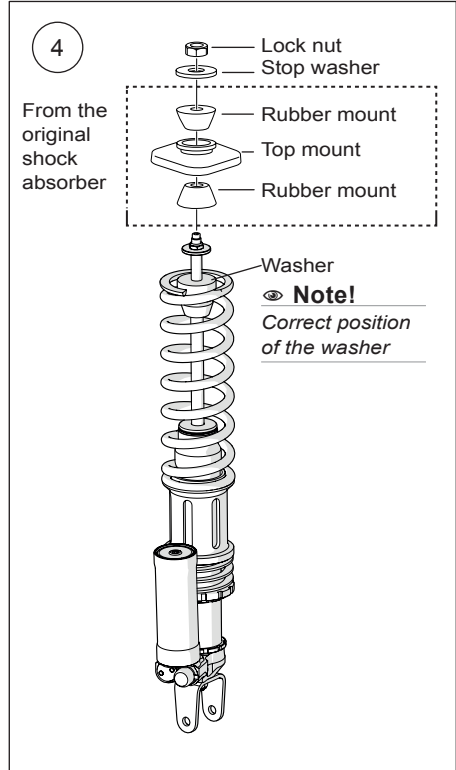

MOUNTING INSTRUCTIONS

5

Release the spring preload before installing the Öhlins shock absorbers to the vehicle.

6

Install the Öhlins shock absorbers. The reservoirs should be pointing towards the rear end of the vehicle, and the lower bracket offset towards the wheel.

7



Set the spring preload once the shock absorbers are installed to the vehicle.

Note!

Make sure that all bolts are tightened to the correct torque and that nothing fouls or restricts movement of the suspension when it is being fully compressed or extended.

Left rear



Right rear

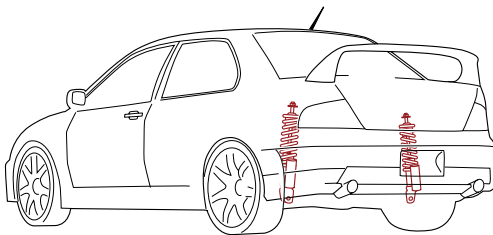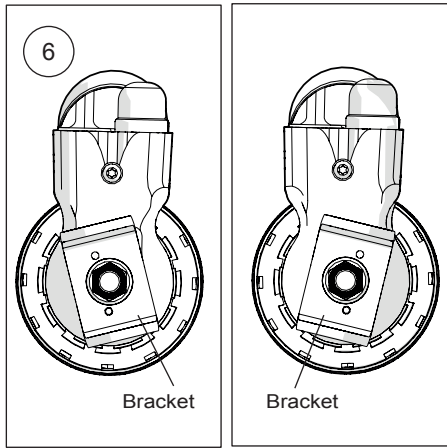

ADJUSTMENTS

⚠ Warning!

Before you ride/drive, always make sure that the setup is according to the recommended setup data. Read about adjustments and setting up in the Öhlins Owner's Manual before you make any adjustments. Contact an Öhlins dealer if you have any questions about setting up.

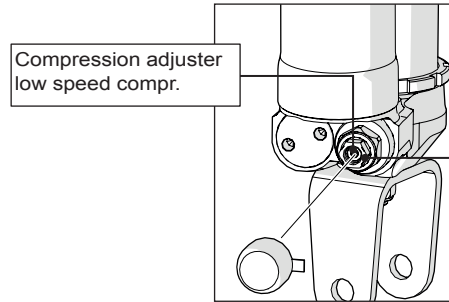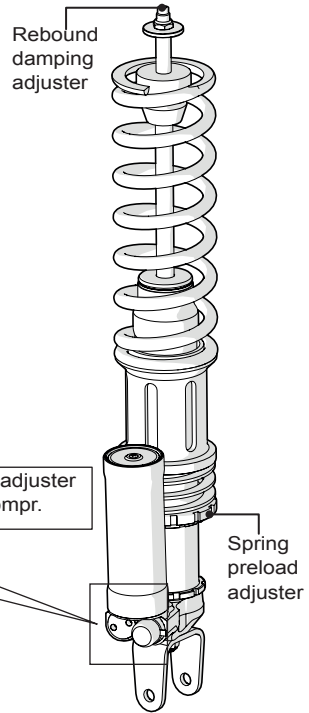

SETUP DATA

Length	576	mm
Stroke	153	mm
Spring part no.	06774-25	
Spring rate	85	N/mm
Spring preload	10	mm
Comp high speed	32	
Comp low speed	14	
Rebound	20	

Optional springs	
Part No	Spring rate N/mm
06774-23	80
06774-27	90
06774-29	95

Öhlins products are subject to continuous improvement and development, therefore, although these instructions include the most up-to-date information available at the time of printing, minor updates may occur.

To find the latest information contact an Öhlins distributor. Please contact Öhlins if you have any questions regarding the contents in this document.

Part no. MI_MIR3P04_4P04_0
Issued 2014-06-13

© Öhlins Racing AB. All rights reserved. Any reprinting or unauthorized use without the written permission of Öhlins Racing AB is prohibited.

Öhlins Racing AB
Box 722
S-194 27 Upplands Väsby, Sweden
Phone +46 8 590 025 00
fax +46 8 590 025 80



www.ohlins.com